



# Compact picosecond lasers for OEM and series production



# About Us

## Profile



**Manufacturer of compact**, DPSS lasers for scientific and industrial applications. Our aim is to bring cost effective lasers to medical and industrial OEM markets



**Accumulated experience in laser development**, production and service over 35 years.



**Advanced short pulse generation technology**



Designing and adopting lasers to OEM for integrators



**Series production**



**Employees** – team of 25 professional persons



**Founded** in April 2018

## Field of expertise



**Diode pumped Nd:YAG, Nd:YLF, Nd:YVO, Nd:YAP lasers + harmonic generators**



**Short pulse generation**  
(20 -50ps , 250-500 ps, <3 ns)



**Pulse energy**  
(1μJ - 2 mJ)



**Repetition rate**  
(single shot to 10 kHz)



**Custom laser systems**  
for specific applications

## Applications of our lasers

- Seeder for amplifiers in the medical field
- Medical diagnostic systems
- OLED repair
- LIDAR
- Digital holography
- Laser Induced Breakdown Spectroscopy
- Non-linear spectroscopy
- Remote sensing
- Matrix Assisted Laser Desorption/Ionization (MALDI)

# The First Picosecond Mini Lasers in the Market!

NEW

Gain-Switched  
**1064 nm**  
Picosecond  
Mini Laser  
**ANGIS**

Diode Pumped  
Sub-Nanosecond  
Passively or Actively  
Q-Switched **880 nm**  
Mini Laser  
**AGRIUS**

## FEATURES

- > 1  $\mu\text{J}$  pulse energy (>100  $\mu\text{J}$  after the First Amplification Stage)
- > Short pulse duration < **50 ps** (<20 ps available)
- > **No Semiconductor Modulator (SESAM), no Mode Locking**
- > Repetition Rate up to **10 kHz**
- > **Ultra-compact**
- > Passively or Actively Q-switched 880 nm Pump Laser
- > Single 808 nm Pump Source for 880 nm Pump Laser and for 1064 nm Preamplifier
- > **Series Production**

## FEATURES

- > True Three Level Nd doped Laser
- > 10  $\mu\text{J}$  pulse energy at **880 nm**
- > Short pulse duration < **1 ns** (Passively QS) and < **0.5 ns** Actively QS)
- > Repetition Rate up to **10 kHz**
- > **Ultra-compact**
- > Second Harmonics **440 nm**
- > **Series Production**



# Diode Pumped Picosecond Passively Q-Switched Laser

## MPL2210

NEW

### FEATURES

- > More than **2 mJ** pulse energy at **1064 nm**
- > Short pulse duration < **250-270 ps**
- > **1 – 100 Hz** repetition rate
- > Ultra-compact
- > Passively Q-switched
- > Average power **200 mW**
- > High peak power > **7 MW**
- > Guaranteed > **3 Gshot** lifetime
- > Other wavelengths (e.g. 532 nm, 355 nm, 266 nm) are available

### APPLICATIONS

- > Laser-induced breakdown spectroscopy (LIBS)
- > Time resolved fluorescence measurements
- > DNA analysis
- > Pollution monitoring
- > Remote sensing
- > Supercontinuum generation
- > Ignition of gas mixtures

**MPL2210** series DPSS passively Q-switched picosecond laser deliver high peak powers > **7 MW** at **100 Hz** repetition rate. Short laser cavity is fixed on thermo- stabilized and controlled baseplate which gives extremely stable output parameters performance. Small footprint is welcome point for integration into OEM lasers. Sub- nanosecond pulse duration of < **250-270 ps**, high pulse energy more than **2 mJ**, variable repetition rate from 1 Hz to 100 Hz covers many applications like pollution monitoring, DNA analysis, supercontinuum generation and many others. Due to short pulse duration and high pulse energy laser delivers high peak power which is up to 7 MW. Optional conversion to green (532 nm) and ultraviolet (355 nm, 266 nm) is also available.



# Specifications <sup>1)</sup>

MODEL	MPL2210
Pulse energy	
at 1064 nm	2 mJ
at 532 nm	1 mJ
at 355 nm	0.5 mJ
at 266 nm	0.25 mJ
Typical pulse duration	< 250 ps - 270 ps <sup>2)</sup>
Pulse to pulse energy stability (RMS)	
at 1064 nm	< 1.0 % <sup>3)</sup>
at 532 nm	< 2.0 % <sup>3)</sup>
at 355 nm	< 3.0 % <sup>3)</sup>
at 266 nm	< 4.0 % <sup>3)</sup>
Power drift	± 3.0 % <sup>4)</sup>
Pulse repetition rate <sup>5)</sup>	1 – 100 Hz
Beam profile	close to Gaussian
Beam divergence <sup>6)</sup>	< 6 mrad
Polarization	linear, horizontal at 1064 nm
Spectral linewidth	SLM
Beam pointing stability <sup>7)</sup>	< 10 µrad
Typical beam diameter <sup>8)</sup>	1.5 mm
Optical jitter	~ 2 µs RMS <sup>9)</sup>


## DIMENSIONS

Laser head (W×L×H)	125 × 295 × 76 mm (with harmonics) 99 × 174 × 45.5 mm (OEM version)
Controller unit (W×L×H)	257 × 271 × 153 mm 75 × 200 × 70 mm (OEM version)


## OPERATING REQUIREMENTS

Cooling requirements	TEC
Ambient temperature	20 – 25 °C
Relative humidity	10 – 80 % (non-condensing)
Mains voltage	100 – 230 VAC, single phase, 50 – 60 Hz <sup>10)</sup>
Power consumption	< 20 W


- <sup>1)</sup> Due to continuous improvements all specifications are subject to change. Unless stated otherwise all specifications are measured at 1064 nm.
- <sup>2)</sup> FWHM level at 1064 nm.
- <sup>3)</sup> Averaged from 60 seconds time interval in 5 series.
- <sup>4)</sup> Over 8-hour period after max 5 minutes of warm-up when ambient temperature variation is less than ±2 °C.
- <sup>5)</sup> Factory-set pulse repetition rate is fixed at 10 Hz repetition rate. Higher repetition rates are available, please inquire for more details.
- <sup>6)</sup> Full angle measured at the 1/e<sup>2</sup> level. Lower beam divergence is available upon request, please inquire for more details.
- <sup>7)</sup> RMS value measured from 1000 shots.
- <sup>8)</sup> Beam diameter is measured 20 cm from laser output at the 1/e<sup>2</sup> level.
- <sup>9)</sup> In respect to Q-switch triggering rising edge pulse.
- <sup>10)</sup> Laser can be powered from appropriate 12 VDC power source. Inquire for details.

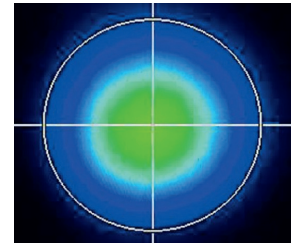

Typical beam intensity profile (20 cm from laser output) of MPL2210 series lasers

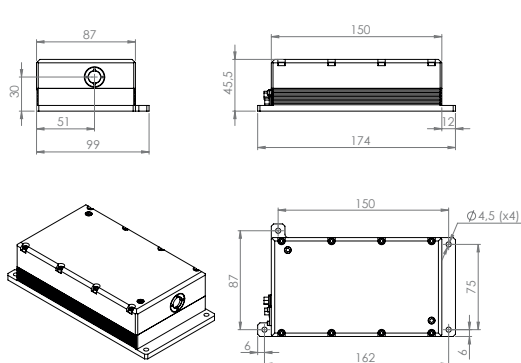

MPL2210 series laser head dimensions OEM version (in mm)

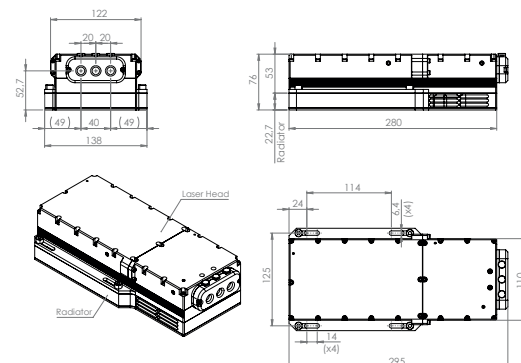

MPL2210 series laser head dimensions (in mm)

# Diode Pumped Picosecond Passively Q-Switched Lasers

## MPL2310 / MPL2510

### FEATURES


- > More than **2 mJ** pulse energy at **1064 nm**
- > Short pulse duration **< 500 ps**
- > **1 – 100 Hz** repetition rate
- > Ultra-compact
- > Passively Q-switched
- > Average power **200 mW**
- > High peak power **> 4 MW**
- > Guaranteed **> 3 Gshot** lifetime
- > Other wavelengths (e.g. 532 nm, 355 nm, 266 nm) are available

### APPLICATIONS

- > Laser-induced breakdown spectroscopy (LIBS)
- > Time resolved fluorescence measurements
- > DNA analysis
- > Pollution monitoring
- > Remote sensing
- > Supercontinuum generation
- > Ignition of gas mixtures

**MPL2310** series DPSS passively Q-switched picosecond lasers deliver high peak powers **> 5 MW** at **100 Hz** repetition rate. Short laser cavity is fixed on thermo-stabilized and controlled baseplate which gives extremely stable output parameters performance. Small footprint is welcome point for integration into OEM lasers. Sub-nanosecond pulse duration of **< 350 ps**, high pulse energy more than **2 mJ**, variable repetition rate from 1 Hz to 100 Hz covers many applications like pollution monitoring, DNA analysis, supercontinuum generation and many others.


Due to short pulse duration and high pulse energy laser delivers high peak power which is up to 5 MW. Optional conversion to green (532 nm) and ultraviolet (355 nm, 266 nm) is also available.

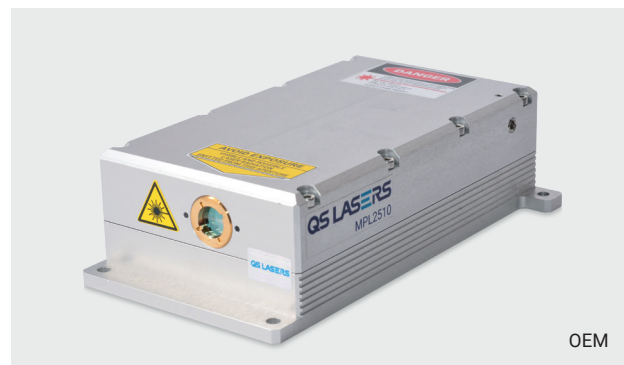

# Specifications <sup>1)</sup>

MODEL	MPL2310 / MPL2510	MPL1310 / MPL1510
Pulse energy		
at 1064 nm	2 mJ	1 mJ
at 532 nm	1 mJ	0.5 mJ
at 355 nm	0.5 mJ	0.25 mJ
at 266 nm	0.25 mJ	0.15 mJ
Typical pulse duration	<350 ps/ <500 ps <sup>2)</sup>	
Pulse to pulse energy stability (RMS)		
at 1064 nm	< 1.0 % <sup>3)</sup>	
at 532 nm	< 2.0 % <sup>3)</sup>	
at 355 nm	< 3.0 % <sup>3)</sup>	
at 266 nm	< 4.0 % <sup>3)</sup>	
Power drift	± 3.0 % <sup>4)</sup>	
Pulse repetition rate <sup>5)</sup>	1 – 100 Hz	
Beam profile	close to Gaussian	
Beam divergence <sup>6)</sup>	< 6 mrad	
Polarization	linear, horizontal at 1064 nm	
Spectral linewidth	SLM	
Beam pointing stability <sup>7)</sup>	< 10 µrad	
Typical beam diameter <sup>8)</sup>	1.5 mm	
Optical jitter	~ 2 µs RMS <sup>9)</sup>	

- <sup>1)</sup> Due to continuous improvements all specifications are subject to change. Unless stated otherwise all specifications are measured at 1064 nm.
- <sup>2)</sup> FWHM level at 1064 nm. Averaged from 60 seconds time interval in 5 series.
- <sup>3)</sup> Over 8-hour period after max 5 minutes of warm-up when ambient temperature variation is less than ±2 °C.
- <sup>4)</sup> Factory-set pulse repetition rate is fixed at 100 Hz repetition rate. Higher repetition rates are available, please inquire for more details.
- <sup>5)</sup> Full angle measured at the 1/e<sup>2</sup> level. Lower beam divergence is available upon request, please inquire for more details.
- <sup>6)</sup> RMS value measured from 1000 shots.
- <sup>7)</sup> Beam diameter is measured 20 cm from laser output at the 1/e<sup>2</sup> level.
- <sup>8)</sup> In respect to Q-switch triggering rising edge pulse.
- <sup>9)</sup> Laser can be powered from appropriate 12 VDC power source. Inquire for details.

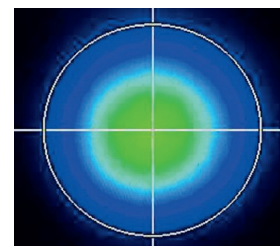


Typical beam intensity profile (20 cm from laser output) of MPL2310 series lasers

## DIMENSIONS


Laser head (W×L×H)	125 × 295 × 76 mm (with harmonics)
	99 × 174 × 45.5 mm (OEM version)
Controller unit (W×L×H)	257 × 271 × 153 mm
	75 × 200 × 70 mm (OEM version)

## OPERATING REQUIREMENTS

Cooling requirements	air cooled
Ambient temperature	15 – 30 °C
Relative humidity	10 – 80 % (non-condensing)
Mains voltage	100 – 230 VAC, single phase, 50 – 60 Hz <sup>10)</sup>
Power consumption	< 20 W
	< 10 W

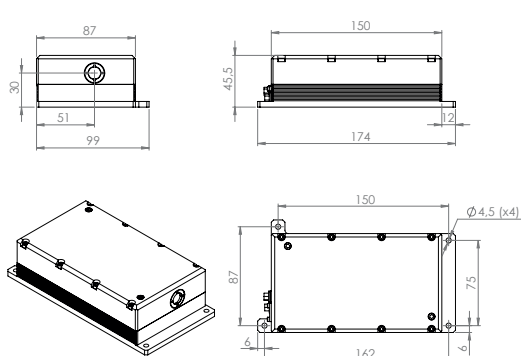

MPL2310 series laser head dimensions OEM version (in mm)

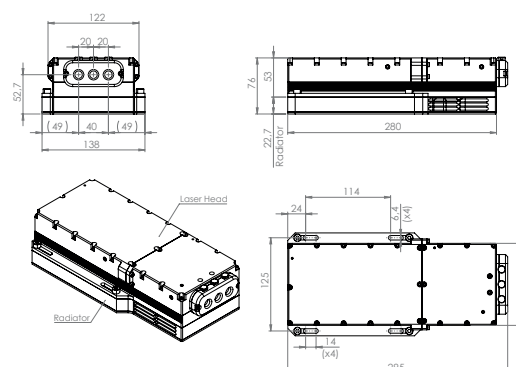

MPL2310 series laser head dimensions (in mm)

# Diode Pumped Sub-Nanosecond Actively Q-Switched Laser

## MPL15100

### FEATURES

- > More than **0.5 mJ** pulse energy at **1064 nm**
- > Short pulse duration < **700 ps**
- > Up to **1 kHz** repetition rate
- > **532 nm, 355 nm, 266 nm** wavelengths as standard option
- > Actively Q-Switched
- > Peak Power **0.7 MW**
- > Other wavelengths (e.g. 532 nm, 355 nm, 266 nm) are available

### APPLICATIONS

- > Spectroscopy
- > Marking
- > MALDI
- > Seeding laser amplifiers
- > Pollution Monitoring
- > Remote sensing

**MPL15100** series robust DPSS actively Q-switched sub-nanosecond lasers deliver multi-kW peak powers, less than 1 ns pulse duration at 1 kHz repetition rate. Short innovative laser cavity with is fixed on thermo-stabilized baseplate which gives extremely stable output parameters performance. Small footprint is welcome point for integration into OEM lasers. Sub-nanosecond pulse duration of < 700 ps with near transform limited spectral linewidth at repetition rates up to 1 kHz with low timing jitter of < 200 ps and energies more than 500  $\mu$ J covers broad spectrum of applications starting from LIBS, laser induced fluorescence to many others. Standard optional harmonics generator to green (532 nm) and ultraviolet (355 nm, 266 nm) is also available.





# Specifications <sup>1)</sup>

MODEL	MPL15100	MPL15100-1K
Pulse energy:		
at 1064 nm	0.5 mJ	
at 532 nm	0.25 mJ	
at 355 nm	0.15 mJ	
at 266 nm	0.1 mJ	
Typical pulse duration	< 700 ps <sup>2)</sup>	
Pulse to pulse energy stability (RMS):		
at 1064 nm	< 0.5 % <sup>3)</sup>	
at 532 nm	< 1.0 % <sup>3)</sup>	
at 355 nm	< 1.5 % <sup>3)</sup>	
at 266 nm	< 2.0 % <sup>3)</sup>	
Power drift	± 3.0 % <sup>4)</sup>	
Pulse repetition rate <sup>5)</sup>	100 Hz	1 kHz
Beam spatial profile	Close to Gaussian	
Beam divergence <sup>6)</sup>	< 4 mrad	
Polarization	Linear, horizontal at 1064 nm	
Spectral linewidth	SLM	
Beam pointing stability <sup>7)</sup>	< 50 µrad	
Typical beam diameter <sup>8)</sup>	1.2 mm	
Optical jitter	< 0.2 ns <sup>9)</sup>	


## DIMENSIONS

Laser head (W×L×H)	163 × 295 × 53.5 mm	
Controller unit (W×L×H)	257 × 271 × 153 mm	
Cable cord length	1 m	


## OPERATING REQUIREMENTS

Cooling requirements	air cooled	
Ambient temperature	15 – 30 °C	
Relative humidity	10 – 80 % (non-condensing)	
Mains voltage	100 – 240 VAC, single phase, 50 – 60 Hz	
Power consumption	< 10 W	< 100 W

- <sup>1)</sup> Due to continuous improvements all specifications are subject to change. Unless stated otherwise all specifications are measured at 1064 nm.
- <sup>2)</sup> FWHM level at 1064 nm.
- <sup>3)</sup> Averaged from 60 seconds time interval.
- <sup>4)</sup> Over 8-hour period after max 5 minutes of warm-up when ambient temperature variation is less than ±2 °C.
- <sup>5)</sup> Factory-set pulse repetition rate is fixed at max repetition rate. Higher repetition rates are available, please inquire for details.
- <sup>6)</sup> Full angle measured at the 1/e<sup>2</sup> level.
- <sup>7)</sup> RMS value measured from 1000 shots.
- <sup>8)</sup> Beam diameter is measured 20 cm from laser output at the 1/e<sup>2</sup> level.
- <sup>9)</sup> In respect to Q-switch triggering rising edge pulse.

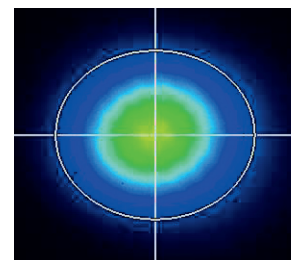

Typical beam intensity profile (20 cm from laser output) of MPL15100 series lasers

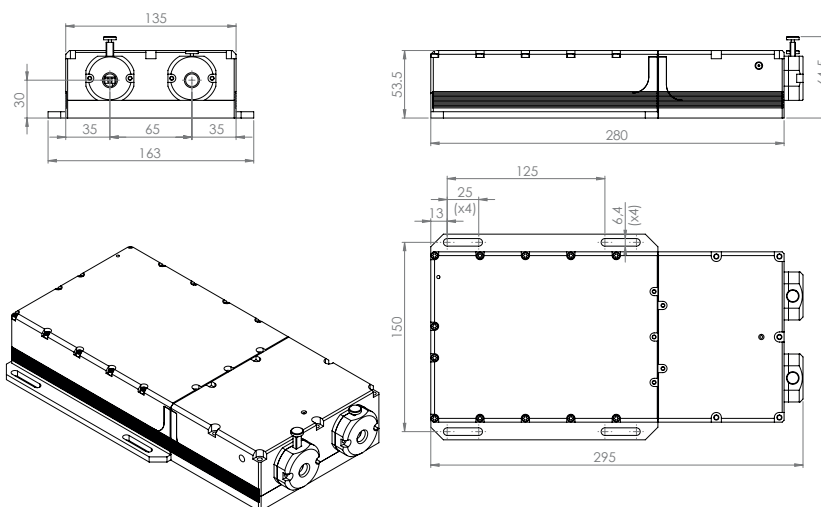

MPL15100 laser head dimensions with attached harmonics unit (in mm)

# Diode Pumped Sub-Nanosecond Passively Q-Switched Laser

## MNL1342

---

### FEATURES


- > More than **50  $\mu$ J** pulse energy at **1342 nm**
- > Short pulse duration **< 0.5 ns**
- > **1 - 100 Hz** repetition rate
- > Passively Q-switched
- > Average power **5 mW**
- > Peak power **100 kW**
- > Guaranteed **> 3 Gshot** lifetime
- > Other wavelengths (e. g. 1342 nm, 671 nm, 447 nm) are available

### APPLICATIONS

- > Laser-induced breakdown spectroscopy (LIBS)
- > Time resolved fluorescence measurements
- > DNA analysis
- > Pollution monitoring
- > Remote sensing
- > Supercontinuum generation
- > Ignition of gas mixtures

**MNL1342** series DPSS passively Q-switched sub-nanosecond lasers deliver high peak powers > 100 kW at 100 Hz repetition rate. Short laser cavity is fixed on thermo-stabilized and controlled baseplate which gives extremely stable output parameters performance. Small footprint is welcome point for integration into OEM lasers. Sub-nanosecond pulse duration of < 0.5 ns, high pulse energy more than 50  $\mu$ J, variable repetition rate from 1 Hz to 100 Hz covers many applications like pollution monitoring, DNA analysis, supercontinuum generation and many others.

Due to short pulse duration and high pulse energy laser delivers high peak power which is up to 100 kW. Optional conversion to green (532 nm) and ultraviolet (355 nm, 266 nm) is also available.

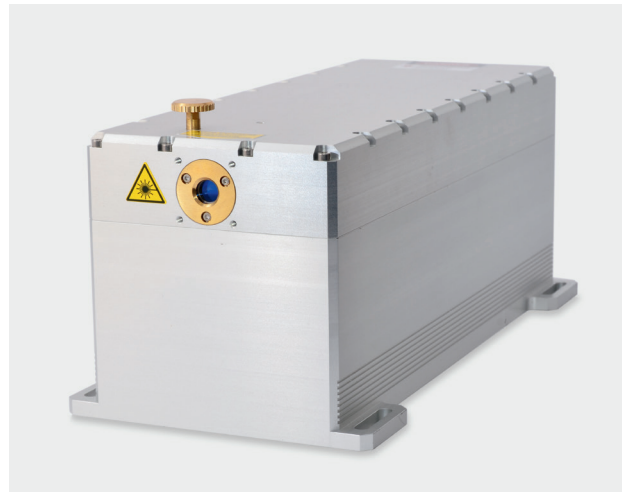

# Specifications <sup>1)</sup>


MODEL	MNL1342
Pulse energy:	
at 1342 nm	50 $\mu$ J
at 671 nm	20 $\mu$ J
at 447 nm	15 $\mu$ J
at 336 nm	10 $\mu$ J
Typical pulse duration	< 0,5 ns <sup>2)</sup>
Pulse to pulse energy stability (RMS):	
at 1342 nm	< 1.0 % <sup>3)</sup>
at 671 nm	< 2.5 % <sup>3)</sup>
at 447 nm	< 3.5 % <sup>3)</sup>
at 336 nm	< 5.0 % <sup>3)</sup>
Power drift	$\pm$ 3.0 % <sup>4)</sup>
Pulse repetition rate <sup>5)</sup>	100 Hz
Beam profile	M <sup>2</sup> < 1.5
Beam divergence <sup>6)</sup>	< 6 mrad
Polarization	Linear, at 1342 nm
Spectral linewidth	SLM
Beam pointing stability <sup>7)</sup>	< 40 $\mu$ rad
Typical beam diameter <sup>8)</sup>	1.5 mm
Optical jitter	$\sim$ 2 $\mu$ s RMS <sup>9)</sup>

## DIMENSIONS

Laser head (W×L×H)	121 × 295 × 140 mm
Controller unit (W×L×H)	115 × 195 × 60 mm


## OPERATING REQUIREMENTS

Cooling requirements	air cooled
Ambient temperature	15 – 30 °C
Relative humidity	10 – 80 % (non-condensing)
Mains voltage	100 – 240 VAC, single phase, 47 – 63 Hz <sup>10)</sup>
Power consumption	< 50 W
	< 10 W

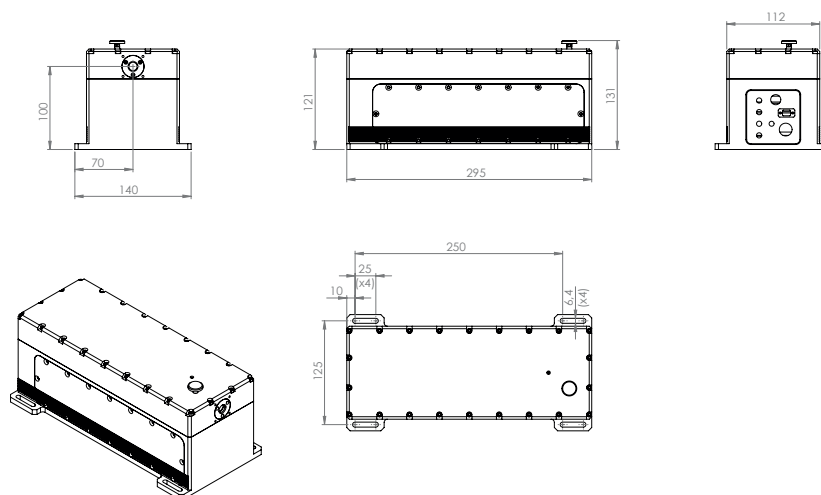

MNL1342 series laser head dimensions (in mm)

- <sup>1)</sup> Due to continuous improvements all specifications are subject to change. Unless stated otherwise all specifications are measured at 1342 nm.
- <sup>2)</sup> FWHM level at 1342 nm.
- <sup>3)</sup> Averaged from 60 seconds time interval in 5 series.
- <sup>4)</sup> Over 8-hour period after max 5 minutes of warm-up when ambient temperature variation is less than  $\pm$ 2 °C.
- <sup>5)</sup> Factory-set pulse repetition rate is fixed at 100 Hz repetition rate. Higher repetition rates are available, please inquire for more details.
- <sup>6)</sup> Full angle measured at the 1/e<sup>2</sup> level. Lower beam divergence is available upon request, please inquire for more details.
- <sup>7)</sup> RMS value measured from 1000 shots.
- <sup>8)</sup> Beam diameter is measured 20 cm from laser output at the 1/e<sup>2</sup> level.
- <sup>9)</sup> In respect to Q-switch triggering rising edge pulse.
- <sup>10)</sup> Laser can be powered from appropriate 12 VDC power source. Inquire for details.

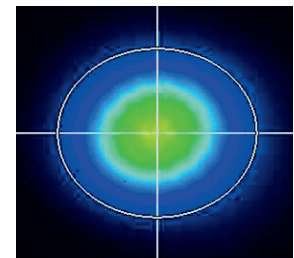

Typical beam intensity profile (20 cm from laser output) of MNL1342 series lasers

